

CO₂ sensor
Snelstart installatie
Quick Guide Installation
Kurzanleitung Installation
Guide d'Installation Rapide

zehnder

always the
best climate

Heating

Cooling

Fresh Air


Clean Air




www.zehnder.nl
www.zehnder.be
www.zehnder.co.uk
www.zehnder-systems.de
www.zehnder.fr

KOPPELEN RF / RF COUPLING / RF KOPPELN / CONNEXION RF

1

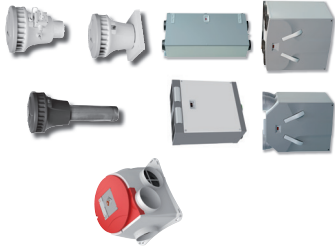

1A

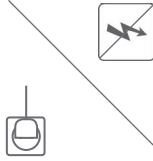

1B




≥ 5 sec.

1C

≤ 10 min



1

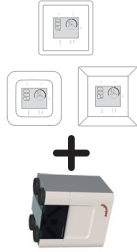

NL: menu ADVANCED SETTINGS > RF PAIRING
> START

EN: menu ADVANCED SETTINGS. > RF PAIRING
> START

DE: Menü ERWEITERTE KONFIG. >
FUNKVERBINDUNG > START

FR: menu OPTIONS AVANCÉES. > COUPLAGE
RF > DÉBUT

1



30 sec.






NL: menu GEAVAN. INSTELL. > RF
SETTINGS > START RF KOPPELING
EN: menu ADVANCED SETTINGS. > RF
SETTINGS > START RF PAIRING

DE: Menü ERWEITERTE OPT. >
FUNKEINSTELLUNGEN > PER FUNK
VERBINDEN




FR: menu OPTIONS AVANCÉES >
PARAMETRES RF > START
COUPLAGE RF








2

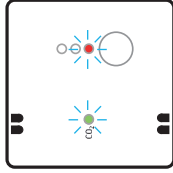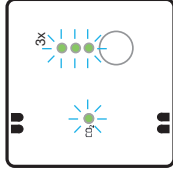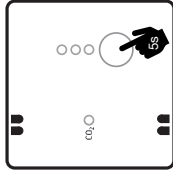




3

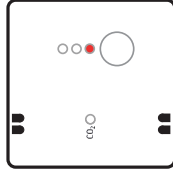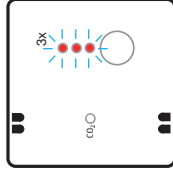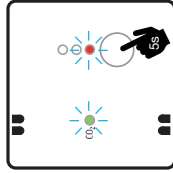

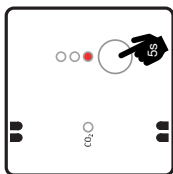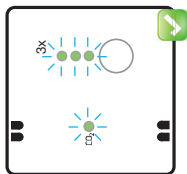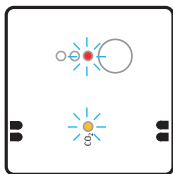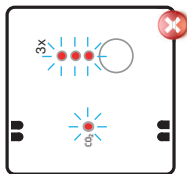
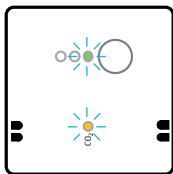


0-10V FUNCTIE / 0-10V FUNCTION / 0-10V FONCTION / 0-10V FUNKTION

1

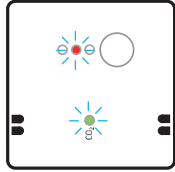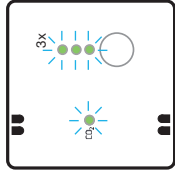
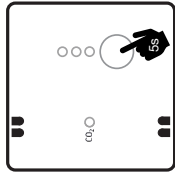


2

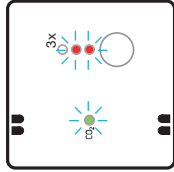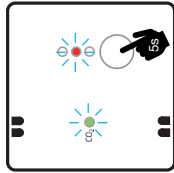




REGELAAR / CONTROLLER / CONTROLLER / CONTRÔLEUR

3.1

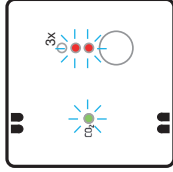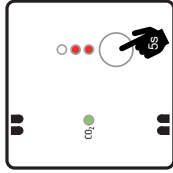

SENSOR / SENSOR / SENSOR / CAPTEUR

3.2

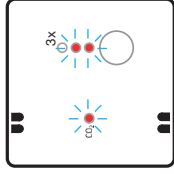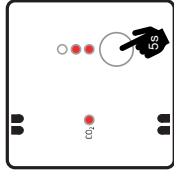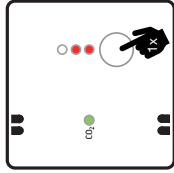

www.zehnder.nl
www.zehnder.be
www.zehnder.co.uk
www.zehnder-systems.de
www.zehnder.fr